




AS

AS

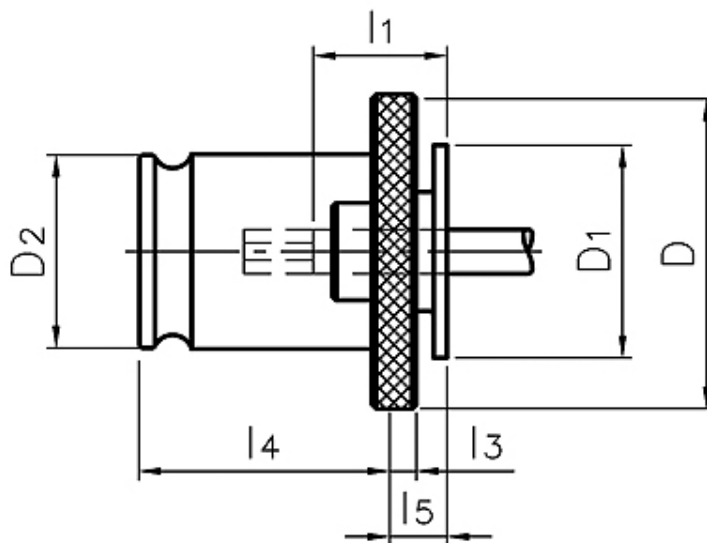

Exemplo de pedido:
 Adaptador Rosqueador AS200

TIPO DE ADAPTADOR	MACHO		ALOJAMENTO PI/ROSQUEADOR	D	D1	D2	l1	l3	l4	l5	PESO
AS 100	M4 - M12	4,5 - 10	CR - 100	30	19	19	17	4	21,5	7	0,060
AS 200	M8 - M20	6,0 - 18	CR - 200	48	30	31	30	5	35	11	0,250
AS 300	M14 - M33	11,0 - 25	CR - 300	70	48	48	44	6	55,5	14	0,800
AS 400	M22 - M48	18,0 - 36	CR - 400	92	60	60	71	13	63	42	1,500

[veja aqui variações apra esta peça](#)



[Imprimir](#)



SAC
 Serviço
 de atendimento
 ao cliente



Dúvidas, Sugestões, Reclamações? Entre em contato conosco

[Infohelp - todos os direitos autorais reservados](#)